



**IN BACK OF THE COMPUTER TOWER OF YOUR DESKTOP ARE 3 PORTS / SOCKETS TO PLUG DEVICES INTO -**

THE **LIMEGREEN** ONE IS FOR AUDIO OUT – E.G., HEADPHONES, SPEAKERS, ETC.

THE **BLUE** ONE IS FOR AUDIO IN – THIS IS THE ONE YOU PLUG YOUR TURNTABLE INTO WHEN YOU WANT TO CONVERT LP'S TO CD'S – YOU NEED THE PROPER CABLE WITH STEREO CONNECTING ENDS – IT MAY EVEN COME WITH YOUR TURNTABLE – IF NOT CERTAINLY RADIO SHACK AND WALMART WILL HAVE THEM – THEY ARE INEXPENSIVE - \$5???

THE **RED** ONE IS FOR A MICROPHONE

YOUR COMPUTER MANUAL OR HELP SOURCES ON YOUR COMPUTER SHOULD HELP YOU IF YOU NEED MORE INFORMATION

EVEN A GOOGLE SEARCH CAN BE USEFUL FOR MORE RELATED INFORMATION